


JAM CLEAN


INSTRUCTION *for* Powermatic® III⁺



When JAM light is on, press the “START” button. Continuously press until the spoon is fully out.

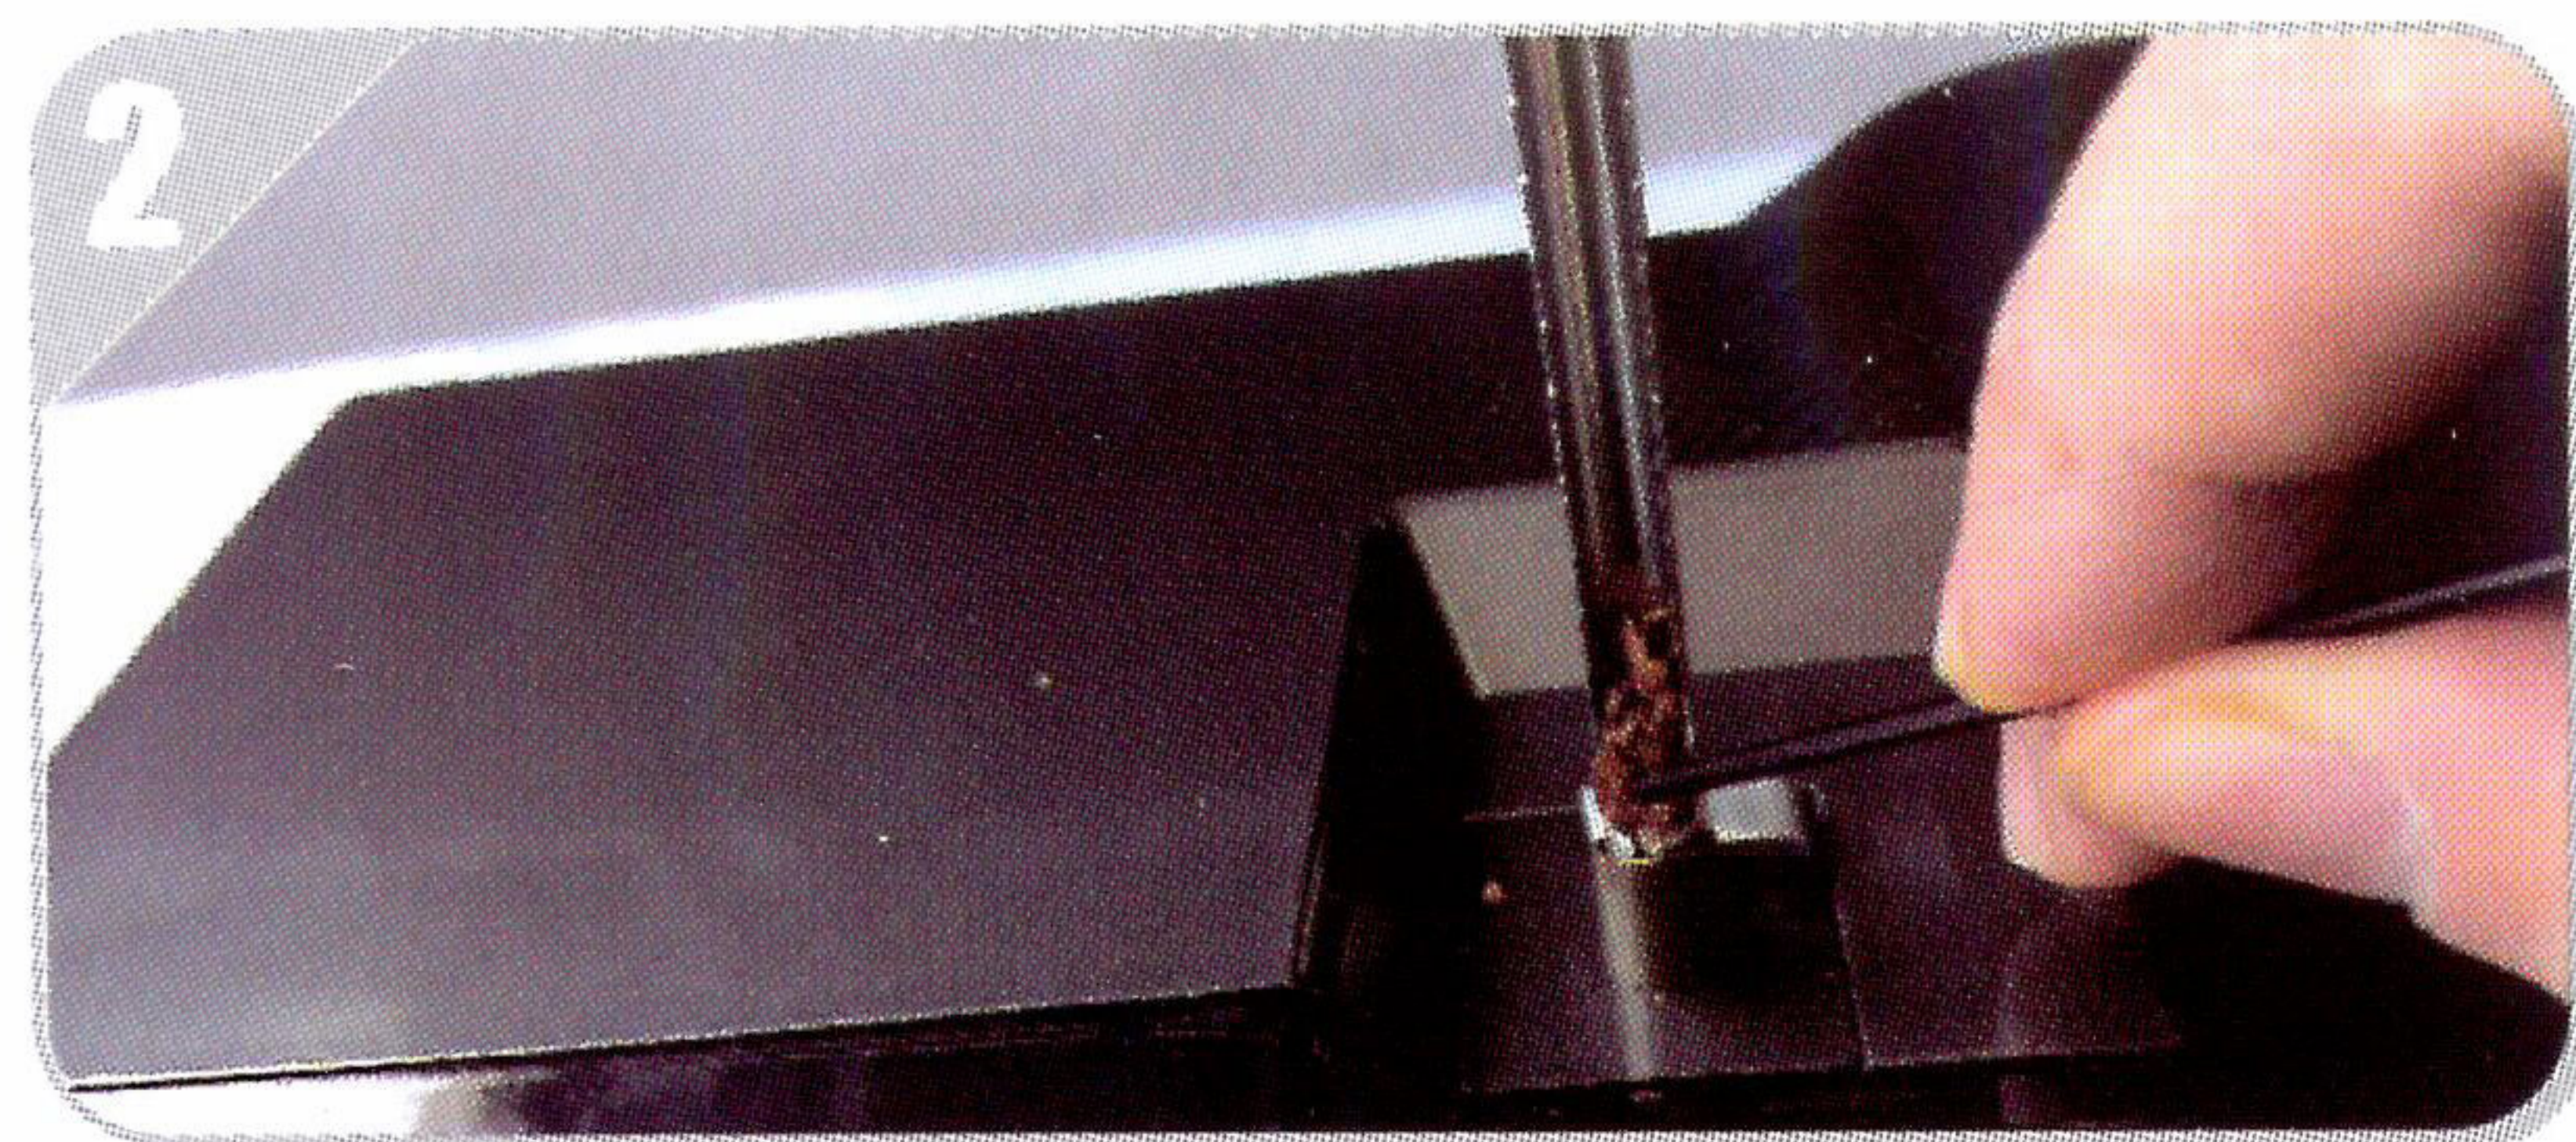


Use probe tool to remove tobacco left on the spoon. Scrape the back of the spoon, it must be completely clear of residue.

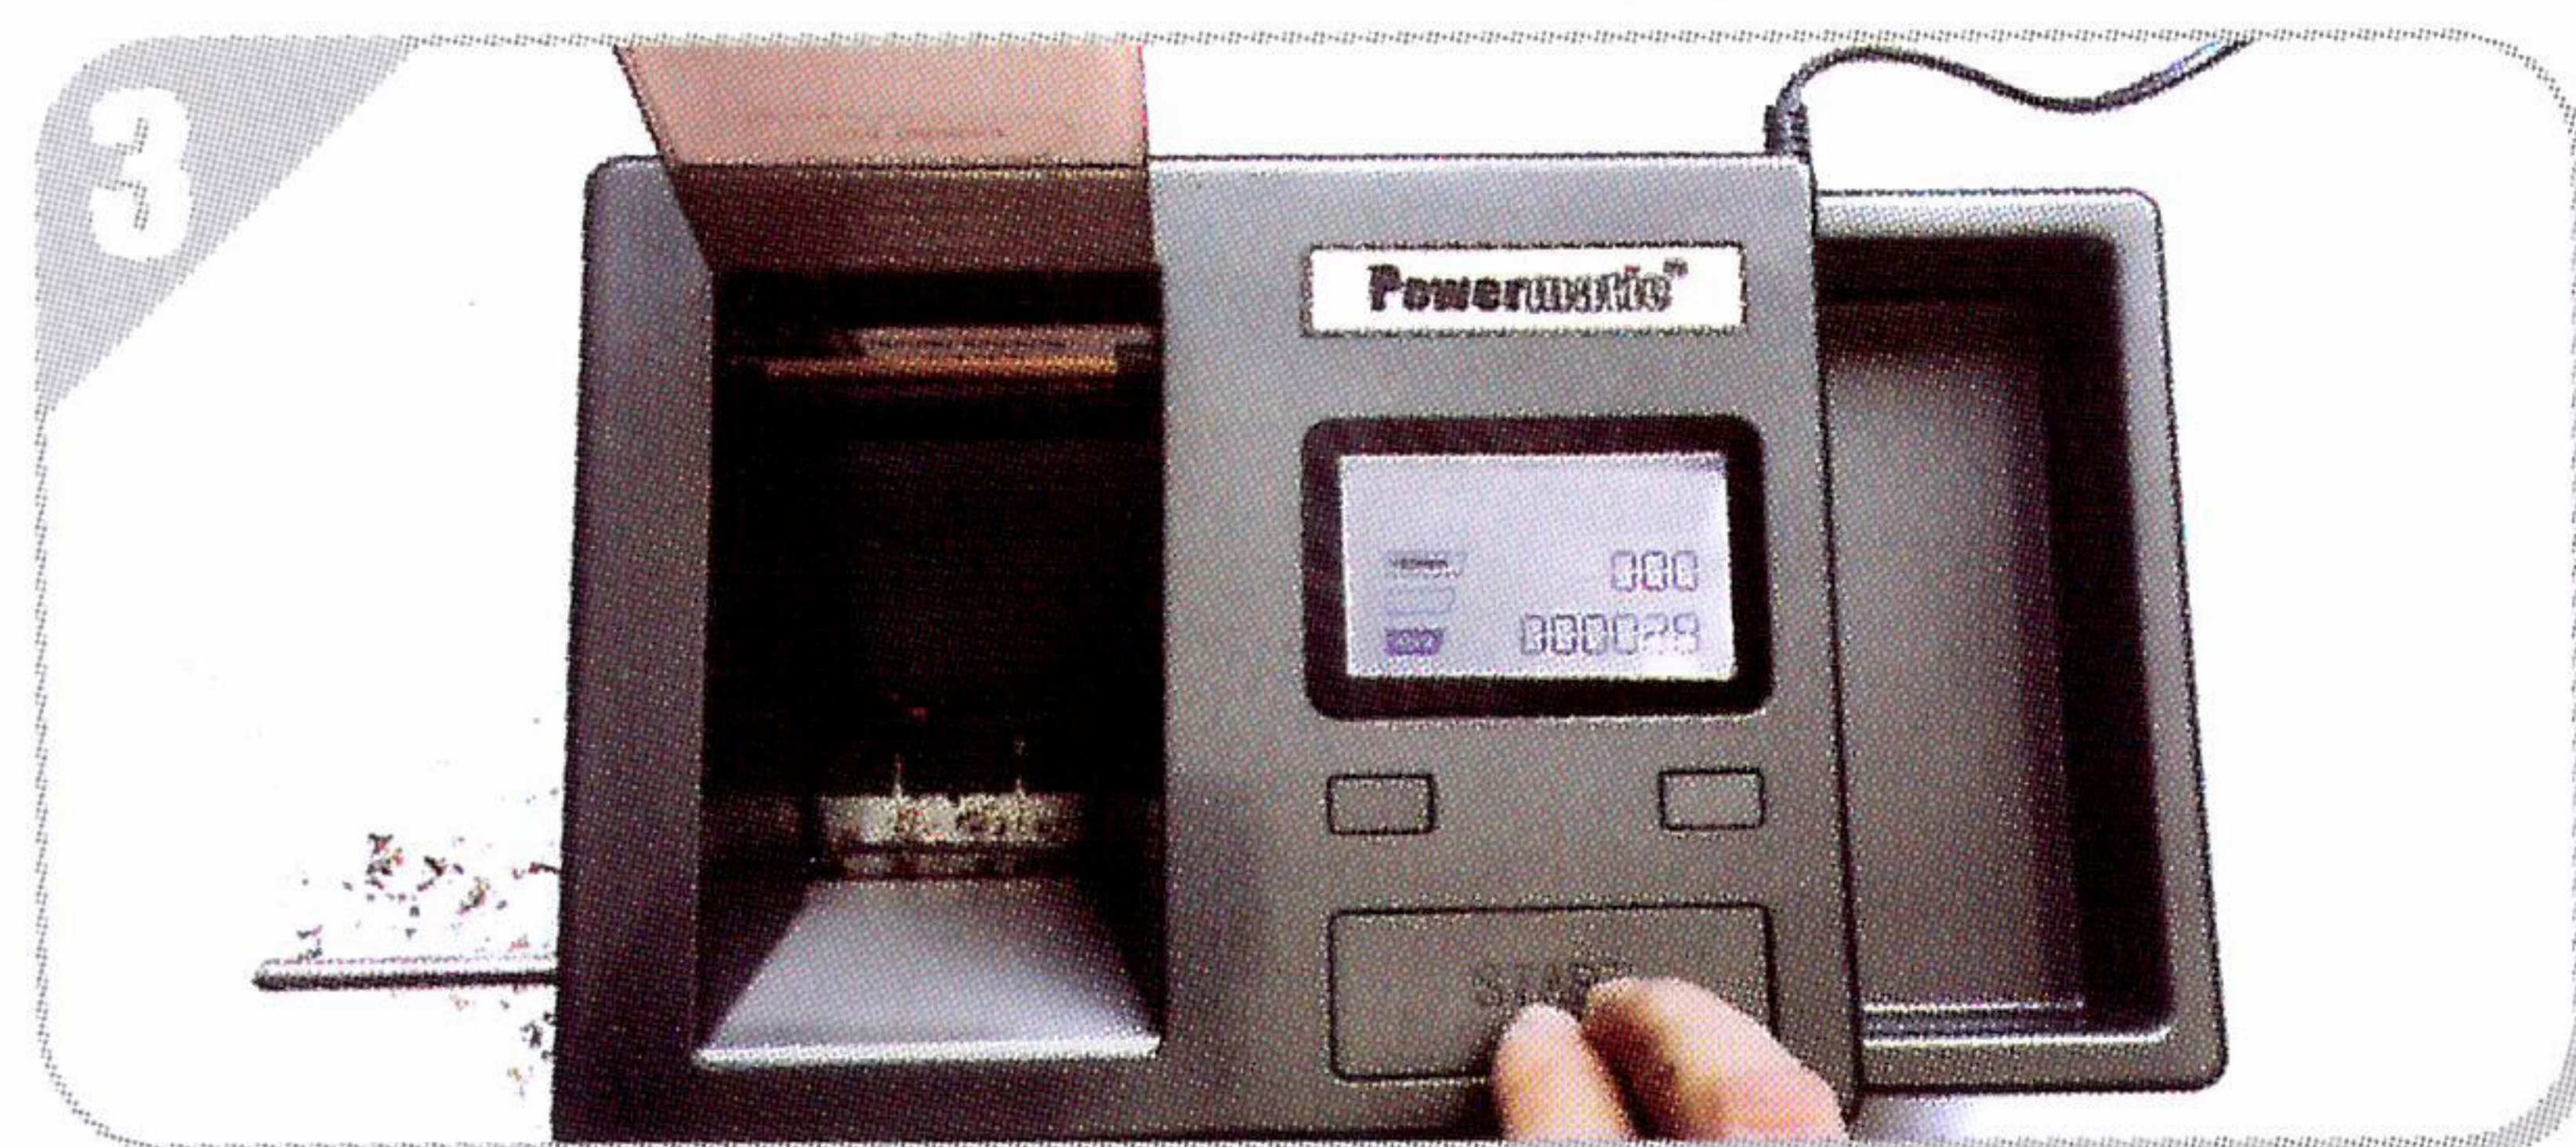


Open the lid to retract the spoon. Press “START” to cycle the spoon to clean any remaining tobacco.

HOPPER

INSTRUCTION *for* Powermatic® III⁺

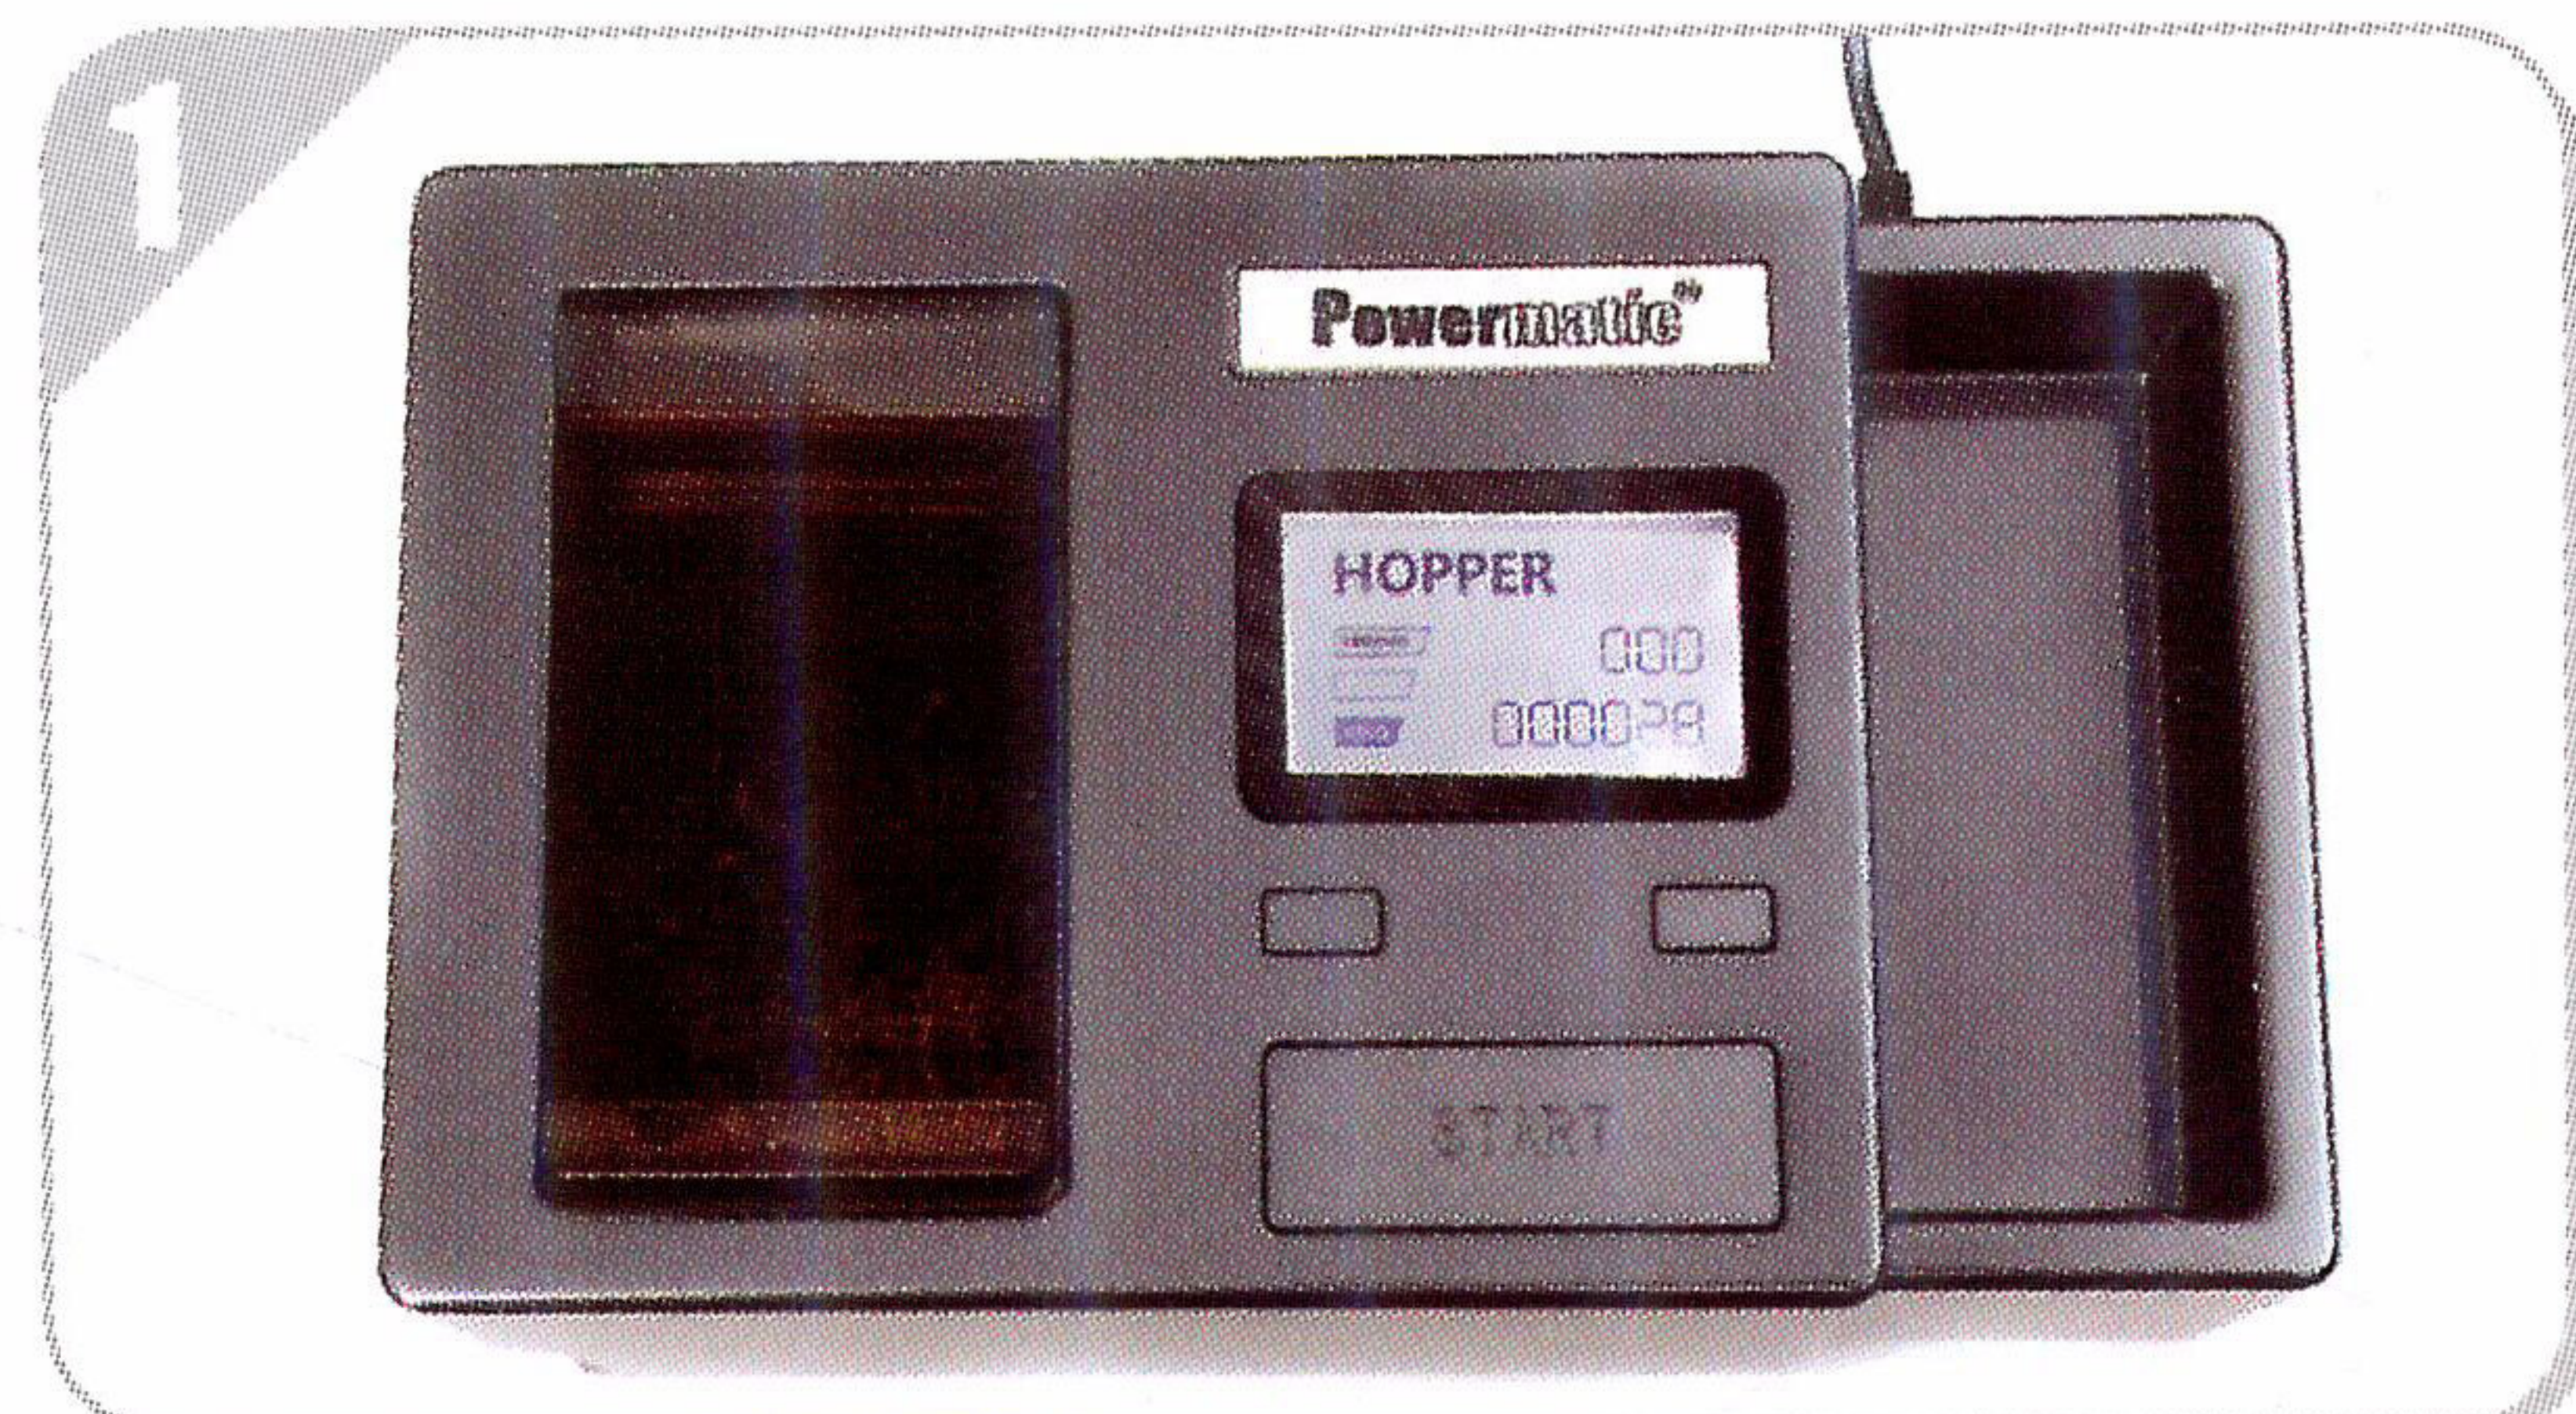

When the HOPPER light is on, open the lid and press “START” to cycle out the spoon. Add new tobacco, and stir tobacco.

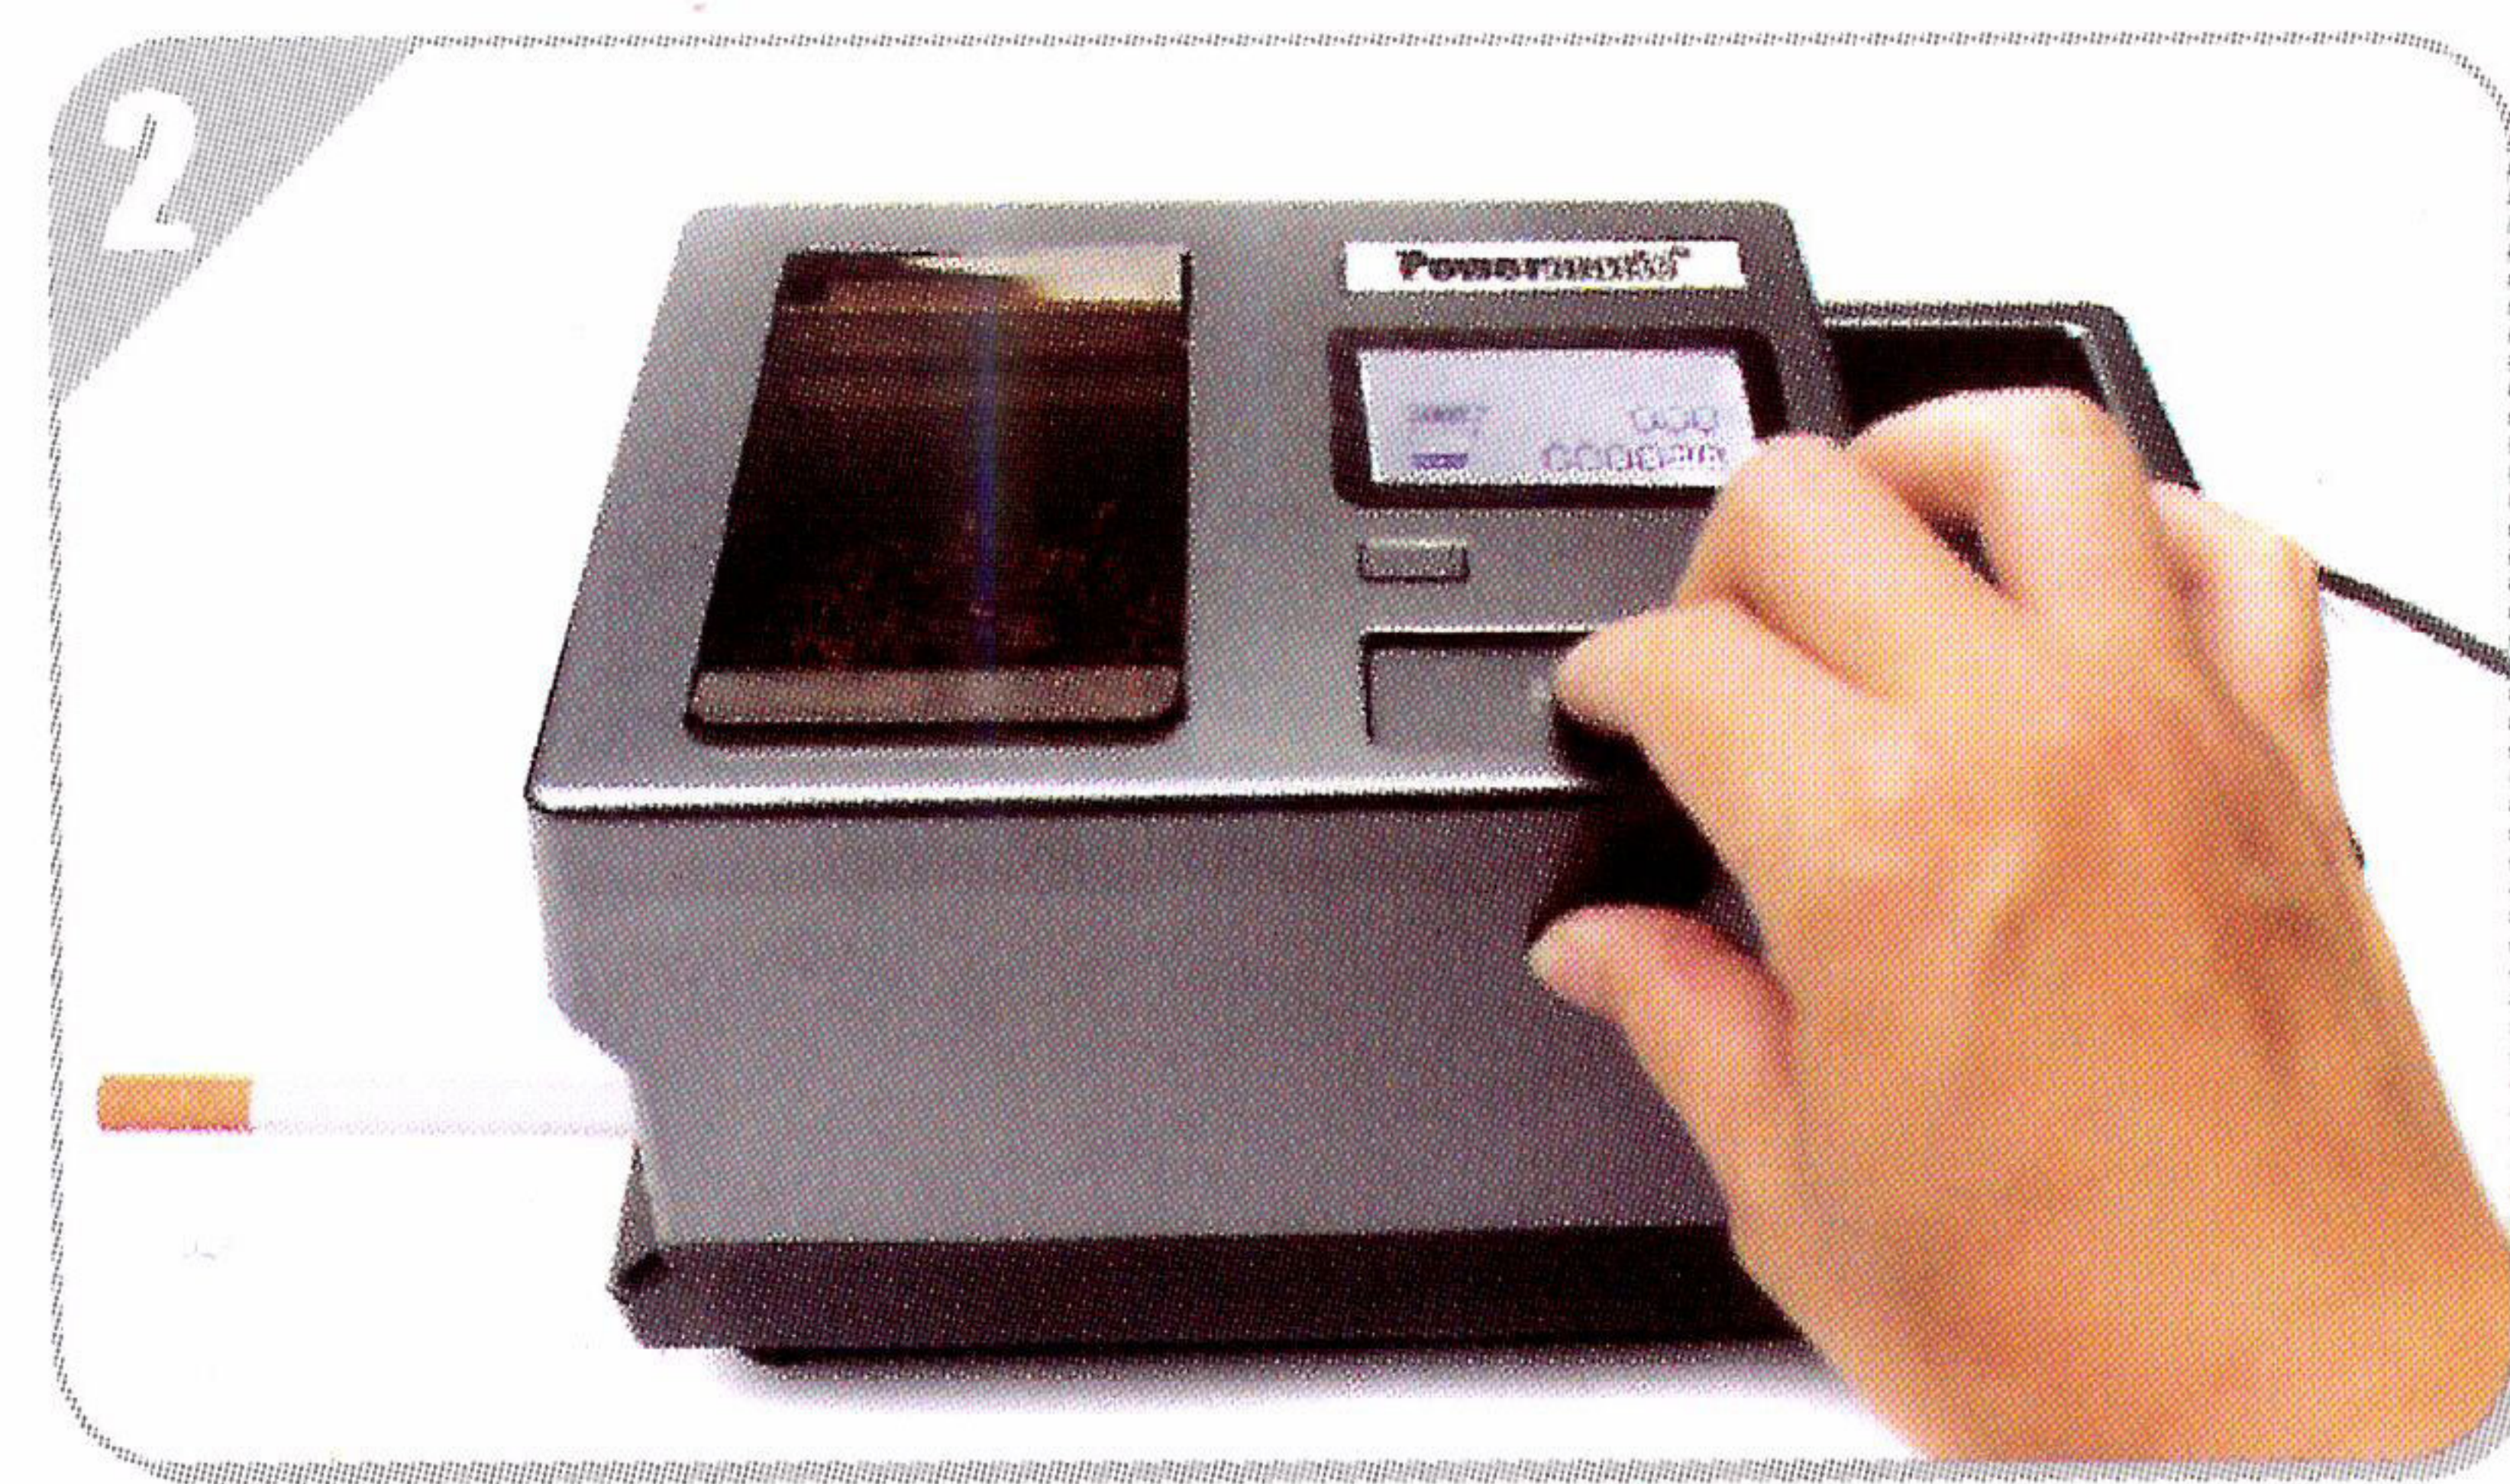

Close the lid and press “START”.